

# HEAT SINK INTERFACE APPLICATION

## 3 Easy Steps

**1** Place Fujifilm Prescale® surface sensor film at the actual contact point of your heat sink interface.

**2** Bolt or clamp the heat sink in place to apply the load and then remove.

**3** The color Fujifilm Prescale® surface pressure film turns pink to indicate the precise PSI level.

